


Motor Speed Controller Manual

Step 1: Keep pressing the button and hold

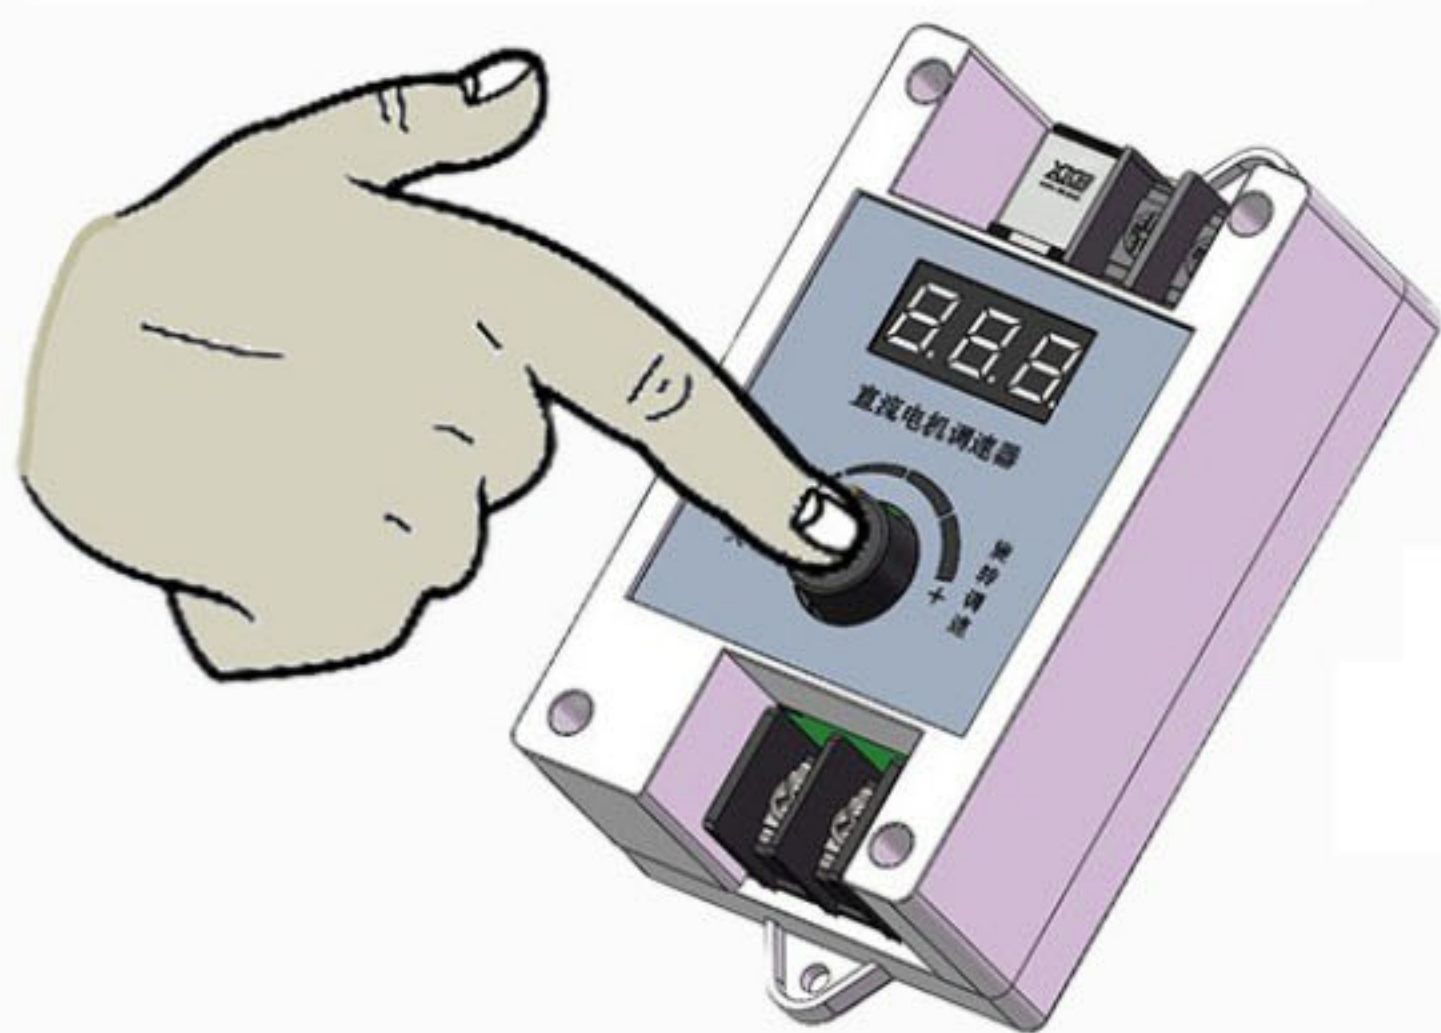


Step 2: After powered on, release the button to enter the setting program



Step 3: L duty ratio off-line setting,
range 1%-99%

Step 4: F frequency setting,
range 1Khz-99Khz

Step 5: E power-on start-up mode,
E 0 power-on work,
E 1 power-on not work

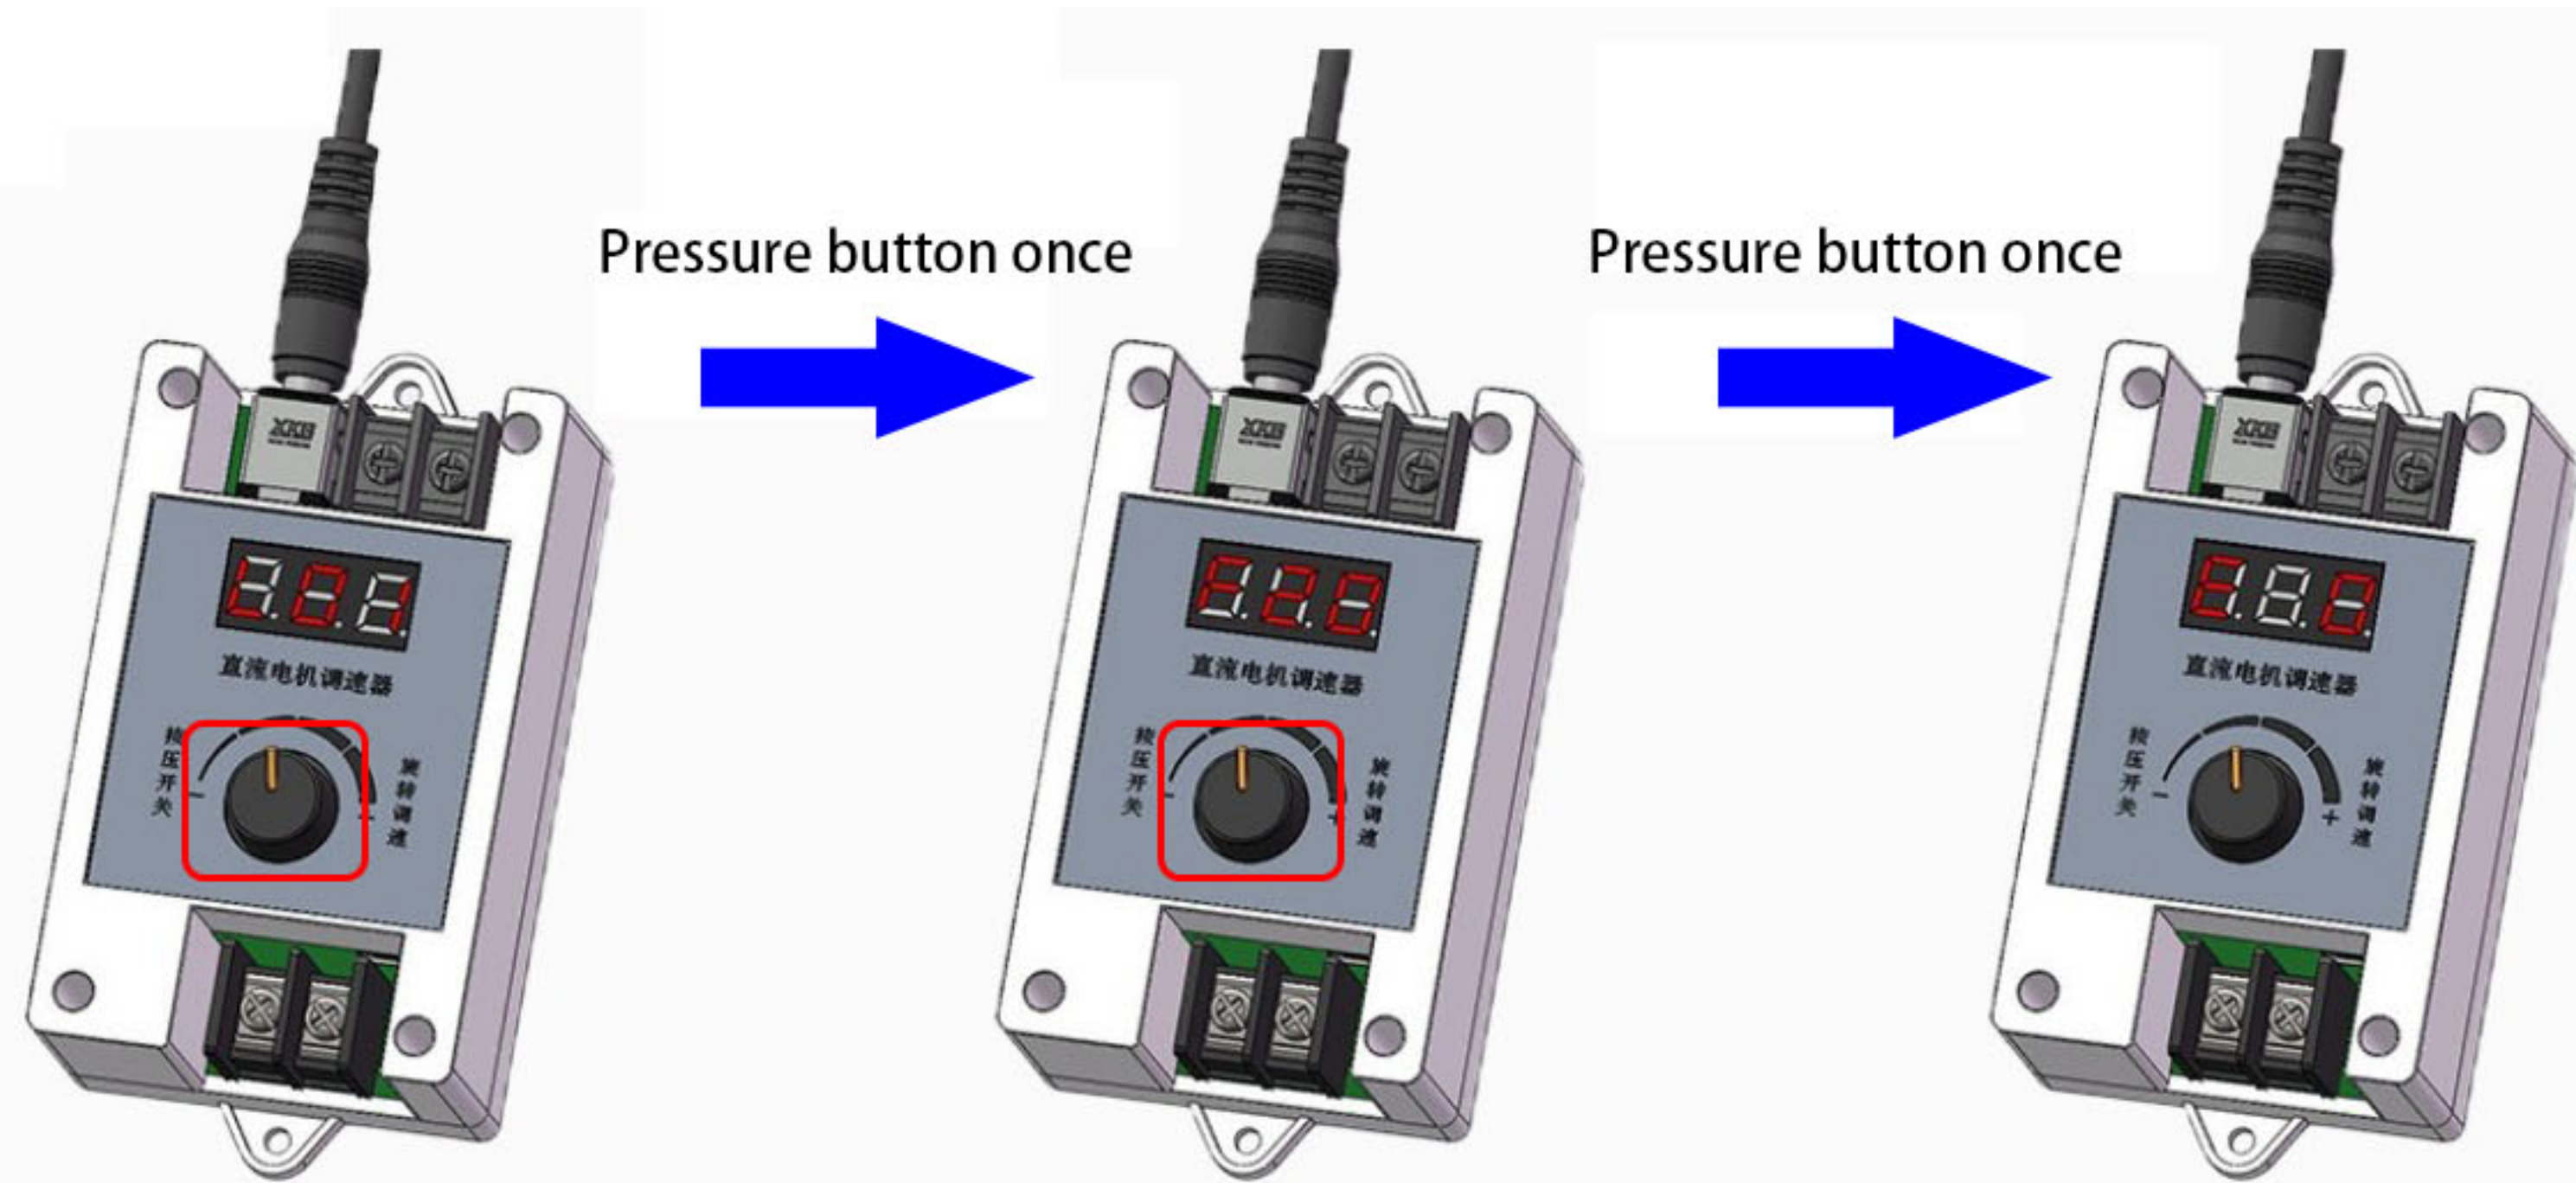

After 5 seconds, the program exit automatically.